MODEL **RQ-705**

SCHEMATIC DIAGRAM

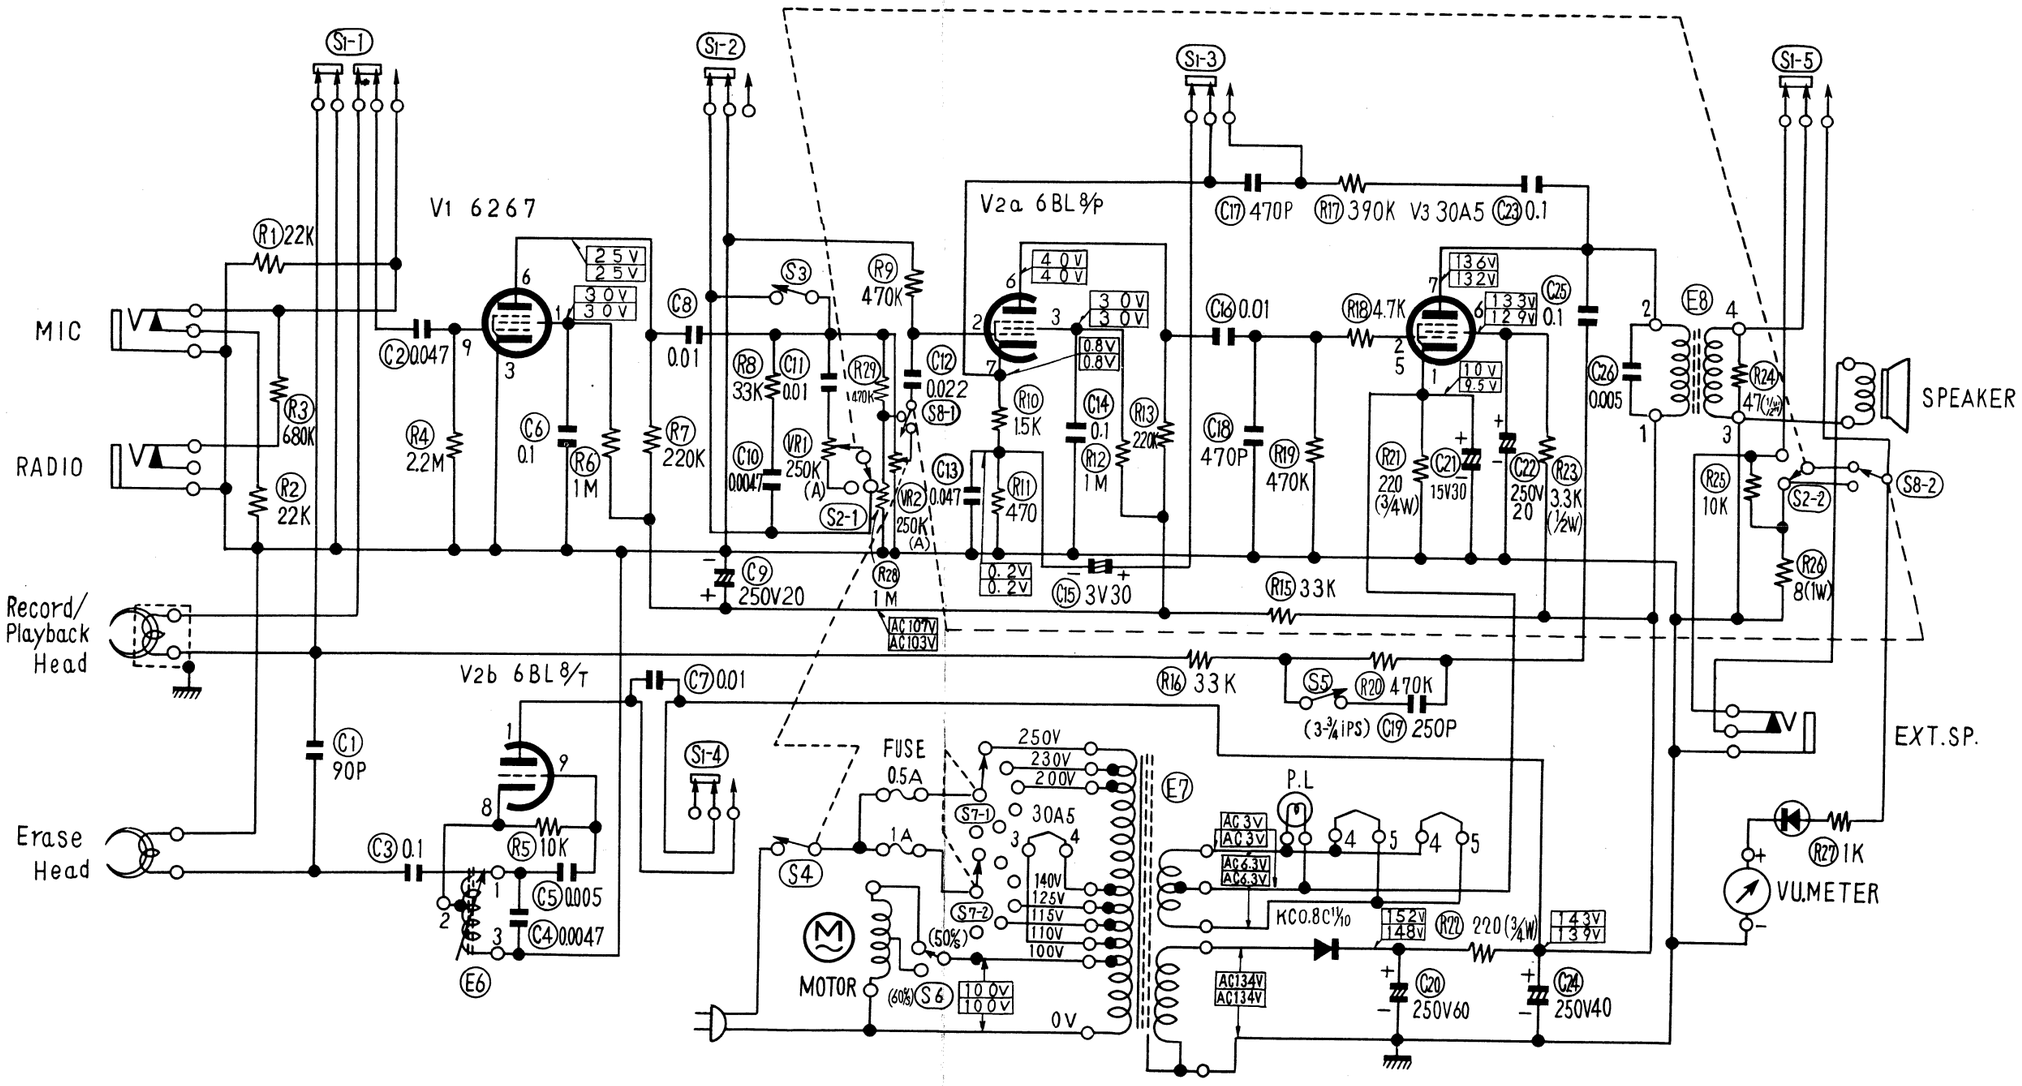

NOTE:

1. S1-1～S1-5 ..... Record Playback Selector Switch. (Shown in Playback Position).
2. S2-1～S2-2 ..... Monitor Switch (Ganged with the Tone Control VR1).
3. S3 ..... Stop Switch.
4. S4 ..... Power ON/OFF Switch (Ganged with the Volume Control VR2).
5. S5 ..... Equalizer Switch (Shown in 7-1/2 ips).
6. S6 ..... AC Cycle Selector Switch.
7. S7-1～S7-2 ..... Voltage Selector Switch.
8. S8-1～S8-2 ..... Non Error Switch.
9. Values indicated in ☐ are DC to chassis ground with no signal applied.
10. The upper values should be measured during playback and the lower values during recording.
11. All Resistance in Ω. K 1.000Ω. M 1.000.000Ω.
12. All Capacitance in Micro Farads. PF Micro-microfarads.

WIRING CONNECTION DIAGRAM RQ-705